




NOMENCLATURE

Display Items

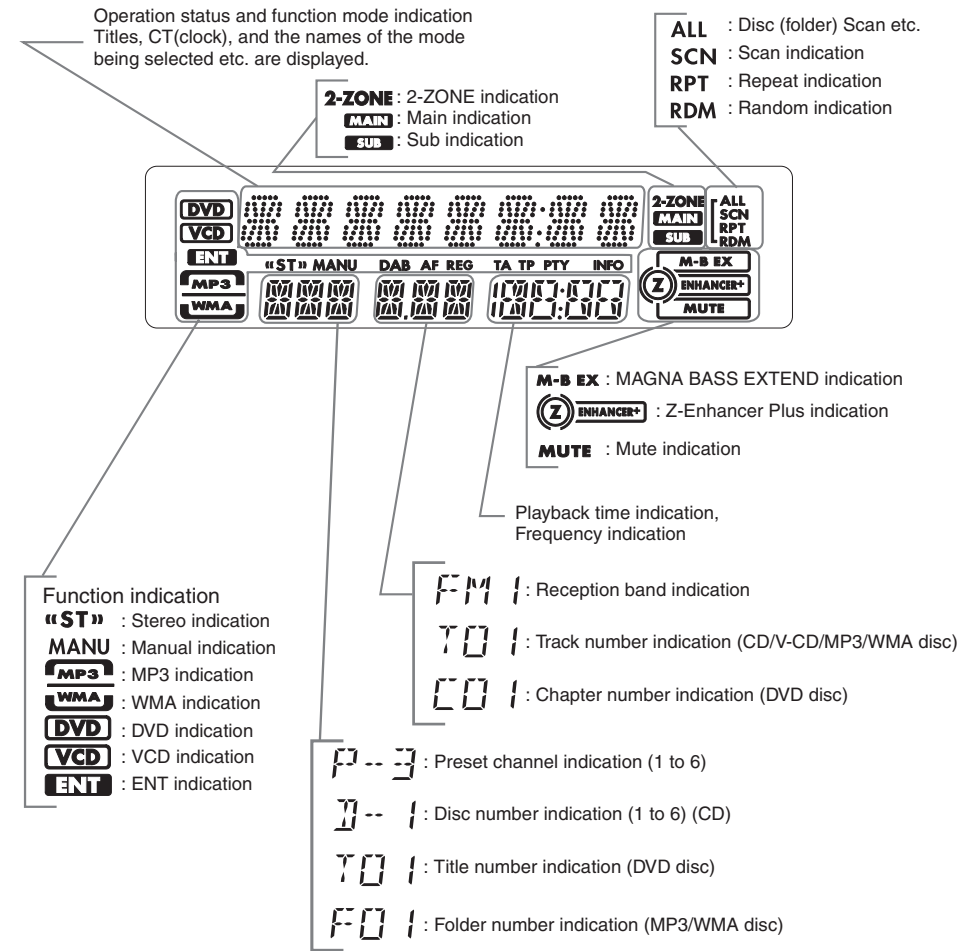

Display Screen

In extreme cold, the screen movement may slow down and the screen may darken, but this is normal. The screen will recover when it returns to normal temperature.

The color of the display screen may vary by heat of the unit or temperature inside your car. This is the phenomenon specific to illuminant; it is not breakdown. The screen will recover when it returns to normal temperature.

Contents

1. PRECAUTIONS.....	3
Flip Down Panel.....	4
Handling Compact Discs	4
2. CONTROLS.....	5
3. NOMENCLATURE	6
Names of the Buttons and their Functions	6
Major Button Operations When External Equipment is Connected to This Unit.....	7
Display Items	8
Display Screen.....	8
4. DCP	9
5. DVD VIDEO SYSTEM	10
6. REMOTE CONTROL.....	12
Buttons Used in the DVD Mode (During DVD/VCD playback)	13
Buttons Used in Other Modes	14
Operation Range of the Remote Control Unit.....	15
Inserting the Batteries	15
7. OPERATIONS	16
Basic Operations	16
Radio Operations.....	19
RDS Operations	20
DVD Operations.....	25
Watching a DVD-Video	26
Watching a video CD (V-CD)	28
Listening to a CD	30
Listening to an MP3/WMA	31
Changing Initial Settings such as Menu Language, etc.....	34
Different Pieces of Music Heard by Plural Listeners (2-ZONE function).....	43
Common Operations	44
8. OPERATIONS OF ACCESSORIES	48
CD Changer Operations	48
TV Operations	50
Digital Radio / DAB Operations	52
9. TROUBLE SHOOTING	55
10. ERROR DISPLAYS	56
11. SPECIFICATIONS.....	57

1. PRECAUTIONS

1. When the inside of the car is very cold and the player is used soon after switching on the heater moisture may form on the disc or the optical parts of the player and proper playback may not be possible. If moisture forms on the disc, wipe it off with a soft cloth. If moisture forms on the optical parts of the player, do not use the player for about one hour. The condensation will disappear naturally allowing normal operation.

2. Driving on extremely bumpy roads which cause severe vibration may cause the sound to skip.

INFORMATION FOR USERS:

CHANGES OR MODIFICATIONS TO THIS PRODUCT NOT APPROVED BY THE MANUFACTURER WILL VOID THE WARRANTY.
- English
- PRECAUTIONS



Flip Down Panel
- This unit uses a flip-down structure that makes possible large-size displays.
- CAUTION
- When opening and closing the FLIP DOWN PANEL, be careful not to catch your fingers. They could be injured.**
1. Always use this unit with the FLIP DOWN PANEL closed.

2. Do not force operations or use this device abnormally when opening or closing the FLIP DOWN PANEL.

3. Do not use the FLIP DOWN PANEL as a tray to place objects on when it is open.

4. When closing the FLIP DOWN PANEL, do not press the [OPEN] button.

5. Strong impacts to the operating or display section can cause damage or deformation.


6. If the FLIP DOWN PANEL does not open fully, gently open it with your hand.
- Handling Compact Discs
- Use only compact discs bearing the  or  mark.
- Do not play heart-shaped, octagonal, or other specially shaped compact discs. Some CDs recorded in CD-R/CD-RW mode may not be usable.
- Handling
- Compared to ordinary music CDs, CD-R and CD-RW discs are both easily affected by high temperature and humidity and some of CD-R and CD-RW discs may not be played. Therefore, do not leave them for a long time in the car.
 - New discs may have some roughness around the edges. If such discs are used, the player may not work or the sound may skip. Use a ball-point pen or the like to remove any roughness from the edge of the disc.
-
- Never stick labels on the surface of the compact disc or mark the surface with a pencil or pen.
 - Never play a compact disc with any cellophane tape or other glue on it or with peeling off marks. If you try to play such a compact disc, you may not be able to get it back out of the CD player or it may damage the CD player.
 - Do not use compact discs that have large scratches, are misshapen, cracked, etc. Use of such discs may cause misoperation or damage.
- Be sure to unfold and read the next page. / Veuillez déplier et vous référer à la page suivante. Bitte ausbreiten und die nächste Seite lesen. / Assicurarsi di aprire e leggere la pagina successiva. Volgende pagina uitvouwen en doorlezen a.u.b. / Cerciórese de desplegar y de leer la página siguiente. Glöm inte att vika ut och läsa nästa sida. / Não deixe de abrir e ler a próxima página.*
- VXZ768R 3
- English
-
- WARNING
- About a Single CD (8cm CD)

 - Since the unit is not compatible with a single CD, do not load it into the unit.
 - Keep in mind the fact that a single CD cannot be played even using a single CD adaptor for the unit.
 - If you try to push it into the unit forcibly without removing it, the CD cannot be ejected. This will result in damage to the mechanism. Please never do this.
- VXZ768R 4
- 8 VXZ768R
-
- VXZ768R 4

- English
- Français
- Deutsch
- Italiano
- Nederlands
- Español
- Svenska
- Português

2. CONTROLS / LES COMMANDES / REGLER / CONTROLLI REGELAARS / CONTROLES / KONTROLLER / CONTOLOS

*Main unit / Appareil principal / Hauptgerät / Apparecchio principale
Hoofdtoestel / Unidad principal / Huvudenhet / Unidade principal*

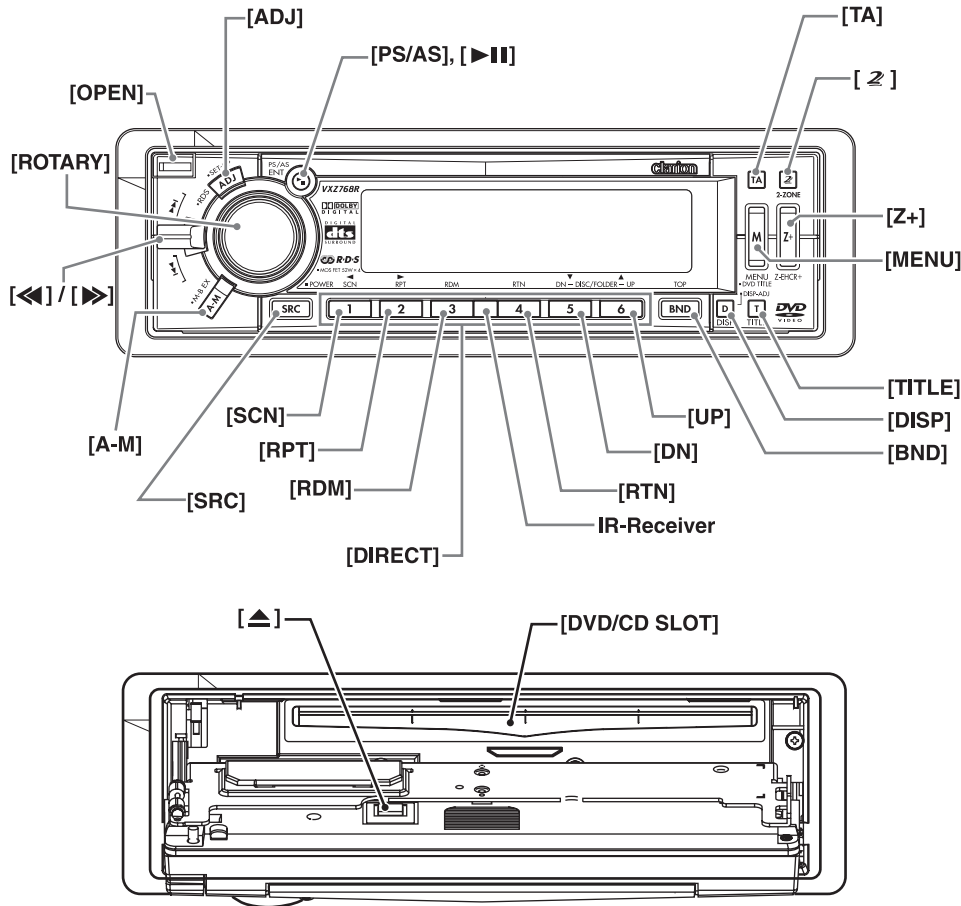

Note: Be sure to unfold this page and refer to the front diagrams as you read each chapter.
Remarque: Veuillez déplier cette page et vous référer aux schémas quand vous lisez chaque chapitre.
Hinweis: Bitte diese Seite ausfalten und beim Lesen der einzelnen Kapitel die Frontdiagramme beachten.
Nota: Assicurarsi di aprire questa pagina e fare riferimento a questi diagrammi quando si legge ciascun capitolo.
Opmerking: Vouw deze pagina uit en zie tevens de afbeeldingen van het voorpaneel tijdens het doorlezen van de volgende hoofdstukken.
Nota: Cuando lea los capítulos, despliegue esta página y consulte los diagramas.
Observera: Vik ut denna sida för att kunna se figurerna över bilstereons framsida medan du läser de olika kapitlen.
Nota: Certifique-se de abrir esta página e consulte os diagramas frontais conforme realiza a leitura de cada capítulo.

English

3. NOMENCLATURE

Note:
• Be sure to read this chapter referring to the front diagrams of chapter “2. CONTROLS” on page 5 (unfold).

Names of the Buttons and their Functions

[OPEN] button

- Deeply push in the button to unlock the flip down panel.

[ADJ] button

- Switches to the adjust mode.
- Press and hold for 1 second or longer to switch to the RDS mode. (radio, DAB mode only)
- Press and hold for 1 second or longer to display the setup main menu while in the DVD mode.

[PS/AS], [▶II] button

- Plays or pauses a CD or DVD while in the DVD mode.
- Press and hold for 1 second or longer in the DVD mode to stop playback.
- Performs preset scan in the radio mode.
- Press and hold for 2 seconds or longer to perform auto store in the radio mode.
- Confirms various settings.

[TA] button

- TA (Traffic Announcement) on and off.

[Z] button

- Press and hold for 1 second or longer to turn on or off the 2-ZONE mode.
- Press to switch the control zone between main zone or sub zone while 2-ZONE mode on.

[Z+] button

- Use the button to select one of the 4 types of sound characteristics already stored in memory.
- Press and hold for 1 second or longer to return to “FLAT” the default value.

[MENU] button

- The DVD menu is displayed while a DVD is playing.
- Pressing and holding for 1 second or longer also displays the DVD title screen.
- The VCD MENU is displayed while a Video CD is playing (when PBC is ON).

[TITLE] button

- Switches the titles.
- Press and hold for 1 second or longer to input or scroll the title.

[DISP] button

- Switches the display indication (main display, clock display).
- Press and hold for 1 second or more but less than 4 seconds to switch to the display adjust mode.
- Press and hold for 4 seconds or longer to turn off the display.

[BND] button

- Switches the band.
- Press and hold for 1 second or longer to switch seek or manual tuning.
- Returns to a first scene or track while in the DVD mode.

[UP], [DN] buttons

- Selects the folder while an MP3/WMA disc is playing.

IR-Receiver

- Receiver for remote control unit. (Operating range: 30° in all directions)

[DIRECT] buttons

- Stores a station into memory or recalls it directly while in the radio mode.

[RDM] button

- Performs random play while in the DVD mode.
- Press and hold for 1 second or longer to perform folder random play while an MP3/ WMA disc is playing.

[RPT] button

- Repeats play while in the DVD mode.
- Press and hold for 1 second or longer to perform folder repeat play while an MP3/ WMA disc is playing.

[SCN] button

- Performs scan play for 10 seconds of each track while in the DVD mode.
- Press and hold for 1 second or longer to perform folder scan play while an MP3/WMA disc is playing.

[SRC] button

- Press to turn on the power.
- Press and hold for 1second or longer to turn off the power.
- Switches the operation mode among the radio mode, etc.

[A-M] button

- Switches to the audio mode (CENTER-VOL, SUB-WOOF VOL, Z-Enhancer Plus, BASS, TREBLE, BALANCE, FADER).
- Press and hold for 1 second or longer to turn on or off the MAGNA BASS EXTENDED.

NOMENCLATURE

[◀◀] / [▶▶] lever

- Select a station while in the radio mode or select a scene or a track while in the DVD mode.
- This lever is used to make various settings.
- Move for 1 second or longer to switch the fast-forward/fast-rewind.

[ROTARY] knob

- Turn to adjust the volume.
- Performs various settings.

[DVD/CD SLOT]

- Disc insertion slot.

[▲] button

- Ejects a disc loaded in the unit.

Major Button Operations When External Equipment is Connected to This Unit

●When the CD changer is connected

- For details, see the section “CD Changer Operations” (P. 48).

[▶II] button

- Plays or pauses a CD.

[TITLE] button

- Switches the titles.
- Press and hold for 1 second or longer to input or scroll the title.

[DISP] button

- Switches the display indication (main display, clock display).
- Press and hold for 1 second or more but less than 4 seconds to switch to the display adjust mode.
- Press and hold for 4 seconds or longer to turn off the display.

[BND] button

- Advances to next disc.

[UP], [DN] buttons

- Selects the disc.

[RDM] button

- Performs random play.
- Press and hold for 1 second or longer to perform disc random play.

[RPT] button

- Performs repeat play.
- Press and hold for 1 second or longer to perform disc repeat play.

[SCN] button

- Performs scan play for 10 seconds of each track.
- Press and hold for 1 second or longer to perform disc scan play.

[◀◀] / [▶▶] lever

- Repeats or advances a track when listening to a disc.
- Move for 1 second or longer to switch the fast-forward/fast-rewind.

●When the TV/DAB is connected

- For details, see the section “TV Operations” (P. 50) or “Digital Radio / DAB Operations” (P. 52).

[ADJ] button

- Press and hold for 1 second or longer to switch the TV picture mode or VTR (external) picture mode.
- Press and hold for 1 second or longer to switch to the RDS mode. (radio, DAB mode only)

[PS/AS] button

- Performs preset scan in the TV mode.
- Press and hold for 2 seconds or longer to perform auto store in the TV mode.
- Performs service scan while in the DAB mode.

[TA] button

- Sets the TA (Traffic Announcement) standby mode in the DAB mode. (This function is only DAB tuner.)
- Press and hold for 1 second or longer to turn on or off the INFO mode. (This function is only DAB tuner.)

[BND] button

- Switches the band.
- Press and hold for 1 second or longer to switch seek or manual tuning.

[DIRECT] buttons

- Stores a station into memory or recalls it directly.

[◀◀] / [▶▶] lever

- Selects a station.

English