



Product Bulletin

00031

Category:	Multimedia	Date:	4/19/01
Subject:	DVS9755z DVD Player		

Problem: I have installed this DVD Player and I have noticed that I have little to no bass response. I go through the pink noise and I can hear something coming from my subwoofers but when I play a DVD or CD, no subwoofer. What am I doing wrong?

Solution: You need to press ADJUST button on the remote faceplate till you reach FILTER. Then press the ENT button. Once you are in their press the left or right arrows to go to the FRONT SPEAKER crossover and change that to anyone of the following points 50Hz, 80Hz, or 120Hz. You will need to press either the up or down arrows to change these points. Then press ENT button and you are done and will have your subwoofer response back.

AV011904