



Product Bulletin

Category:

Multimedia

Date:

July 9, 2003

Subject:

VRX925VD and VRX935VD Parental Codes

Description:

The VRX925VD and VRX935VD have a Parental Lock Code preventing the viewing movies considered inappropriate for younger viewers. This feature can be turned off, allowing for viewing of all movies.

Changing Parental Setting:

- 1) Press and "ADJ" button for 1 second.
- 2) Tap "DVD" on the top menu bar on the screen.
- 3) If a DVD is playing, tap the "STOP" icon on the screen to bring up the DVD Setup menu.
- 4) Tap the "Down Arrow" on the screen to bring up the second page of the setup menu.
- 5) Tap the "Parental Level" icon on the screen.
- 6) Enter the Password Code. (*Default code 0000*)
Tap "ENT" icon after Password Code has been entered.
- 7) Tap the Up or Down Arrows to select the Parental Level. (*Default Level 8*)
Tap "ENT" icon after Parental Level has been selected.
- 8) Press "RTN" to save selection.

Level 7: NC-17 (No One 17 and Under Admitted)

Level 6: R (Redistricted)

Level 4: PG-13 (Parents Strongly Cautioned)

Level 3: PG (Parental Guidance Suggested)

Level 1: G (General Audiences)

Level 0: No Parental