

<b>Category:</b>	Source Units	<b>Date:</b>	05-11-2001
<b>Subject:</b>	Creating and Playing MP3 discs for the VS715 and DXZ815MP		

### Description:

As there are many methods to create and store MP3 files, Clarion has created the following guidelines in order to help you take full advantage of the MP3 playback features of the VS715 DVD player and the DXZ815MP Head unit.

### Creating MP3 discs:

Please follow the steps below when creating MP3 discs.

It is recommended that MP3 CDs are created using ISO9660 format when saving MP3 files to CD. The DXZ815MP will not play MP3 CDs created in Joliet format.

Using Adaptec Easy CD Creator (Version 4):

1. Start the "Easy CD Creator" program.
2. Select "Data CD"
3. If the "Adaptec Easy CD Creator Wizard" window comes up, click "cancel".
4. Click "File", and scroll down and select "CD layout properties".
5. Under the "General" tab, change the File System setting to "ISO9660".
6. Under the "File System" tab, select "Long File Names (30 characters max.)".
7. Click "Ok".
8. Select the files to be copied onto the CD.
9. Click "File" and select "Create CD".

**Note:** The VS715 will not read CDR-W.  
The DXZ815MP will read both CDR and CDR-W.

### How to play an MP3 disc in the VS715:

- 1) Insert MP3 disc into the VS715.
  - The video screen will display "READING" for the first few seconds, then display "Menu"
- 2) Press the "Enter" button on the remote control 2 times.
- 3) Use the "arrow" (◀▶, ▲, ▼) buttons to highlight desired song.
- 4) Press the "Play/Pause" (▶ / ||) button to begin playing music.

**Note:** The VS715 will play CDR but not CDR-W.

cq011105