

Category:

Multimedia

Date:

05-03-2001

Subject:

VS715 Screen Scrolling

Description

When using the VS715 with a VRX610/VRX6671z, the opening screen, "DVD" logo, scrolls across the screen when the unit is first turned on. Once the start up mode is completed and DVD begins to play, the video picture returns stops scrolling and the DVD plays normally.

The "DVD" logo also scrolls across the screen when an audio CD is playing in the VS715.

Solution

Step 1. – Set the VRX610/VRX6671z into PAL Mode

1. Press FUNC to turn the unit on.
2. Press OPEN to open up monitor.
3. Press ADJ to display the adjustment menu.
4. Move the Joystick down to select "VCR N/P"
5. Move the Joystick right to highlight PAL.
6. Press ENT at the center of the Joystick to select.
7. Press ADJ to exit the adjustment menu and save the setting.

Step 2 – Set the VS715 into PAL Mode

1. Turn the unit on.
2. Make press the eject button and make sure there is no disc inserted into the unit.
3. The DVD logo should appear on the screen.

Using the remote control:

4. Press MENU to enter the set up menu.
5. Use the down arrow key to select "TV SYS"
6. Press ENTER to change to select [PAL].
Be sure that [PAL] is selected, not [PAL 60].
7. Press MENU to exit the set up menu and save the setting.

Notes

Using the Aux input of the VS715 requires the VS715 and VRX610z/VRX6671z to be put back into NTSC mode.

CQ010517