



Product Bulletin

PBMM001

Category:

Multimedia

Date:

May 8, 2003

Subject:

VS735: Parental Control

Description:

The VS735 has a Parental Control feature that can either be utilized depending the customer's needs. For those customers that do not wish to have the Parental Control, it can be turned OFF.

Turning OFF the Parent Control:

1. Turn ON the monitor and VS735. *(Make sure to eject any disc that might be in the unit.)*
2. Press the "SETUP" button on the remote control.
3. Use the up and down arrows to highlight "PREFERENCES."
4. Press the "ENTER" button on the remote control.
5. Use the up and down arrows to highlight "PARENTAL."
6. Press the "ENTER" button on the remote control.
7. Use the up and down arrows to highlight "OFF."
8. Press the "ENTER" button to save selection.

Changing the Parent Control Code: (default code: 3308)

1. Turn ON the monitor and VS735. *(Make sure to eject any disc that might be in the unit.)*
2. Press the "SETUP" button on the remote control.
3. Use the up and down arrows to highlight "PREFERENCES."
4. Press the "ENTER" button on the remote control.
5. Use the up and down arrows to highlight "PASSWORD."
6. Press the "ENTER" button on the remote control.
7. Use the "0-9" numeric keys to enter in new code.
8. Press the "ENTER" button to save new code.