



Product Bulletin

PB00003

Category:

Headunits

Date:

1/16/02

Subject:

Error Codes

Error Codes:

- Error 1 Battery inside CD Changer needs to be replaced.
- Error 2 CD error message. Mechanism has as eject problem or takes a long time to select CD.
- Error 3 CD error message. The pick-up is out of focus during play mode due to scratches on the disc or contamination.
- Error 4 Connection problem. Reconnect the data cable.
- Error 5 CD error message. Could not read correct data due to CD ROM.
- Error 6 CD error message. Could not read data from disc because it is upside-down.
- Error 8 Tape Drive system defective. Eating tape or something wrong with the drive system.
- Error 9 Weak RF. Try alternate frequency
- NO CD CD error message. No CD is magazine or no magazine in CD Changer.