


Clarion

2-DIN

BKX-1190-20



Installation manual for: **Mercedes Sprinter 2006 -->/ Volkswagen Crafter 2006 -->**

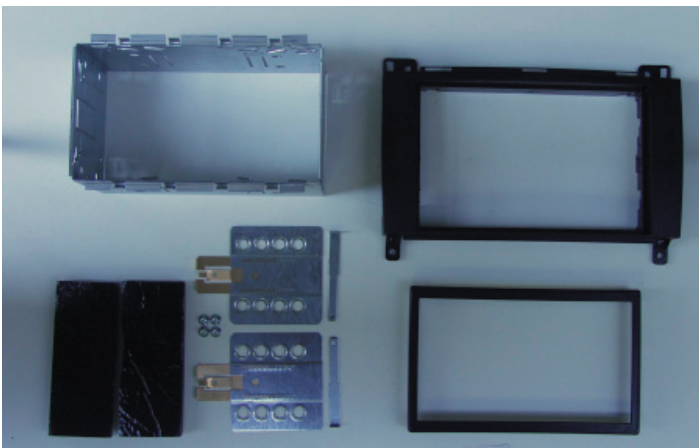

Installation kit includes the following items:



- * 1X 2-ISO 110 mm. metal bracket
- * 1X Replacement panel
- * 1X Radio trim
- * 2X Mounting plates
- * 2X Mounting spacers
- * 2X Radio removal keys
- * 4X Screws
- * 2X Cushion

EXAMPLE

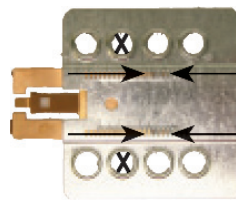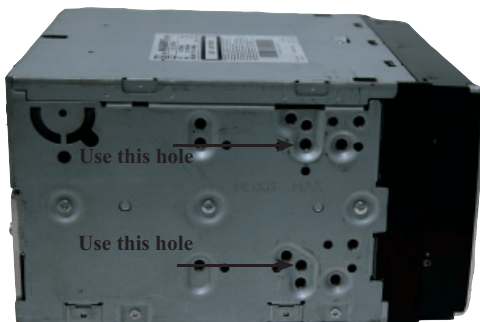

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 11 & 13 marked with an arrow.
Measured from left to right.

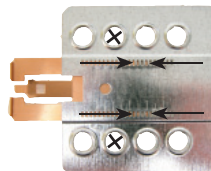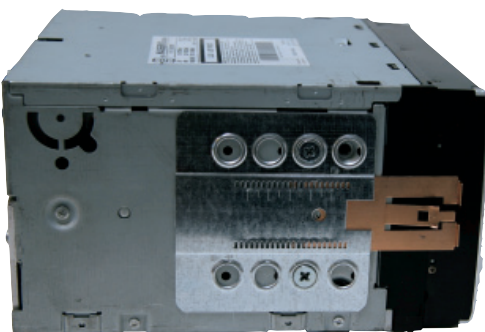

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 11 & 13 marked with an arrow.
Measured from left to right.

* Mount the plates.

Remark: The fixing position can be different between Audio and Multimedia unit!

Clarion

2-DIN

BKX-1190-20



Remove the plastic panel. Use a plastic wedge.



Remove the original radio. This is tighten by four screws.



Place the replacement frame. Place the 2-Din metal bracket.



Place the headunit and the radio trim.

Connect all of the needed wiring harnesses and check the connections carefully.