


**BKX1214-02**

**Nissan 350Z**

**Clarion**

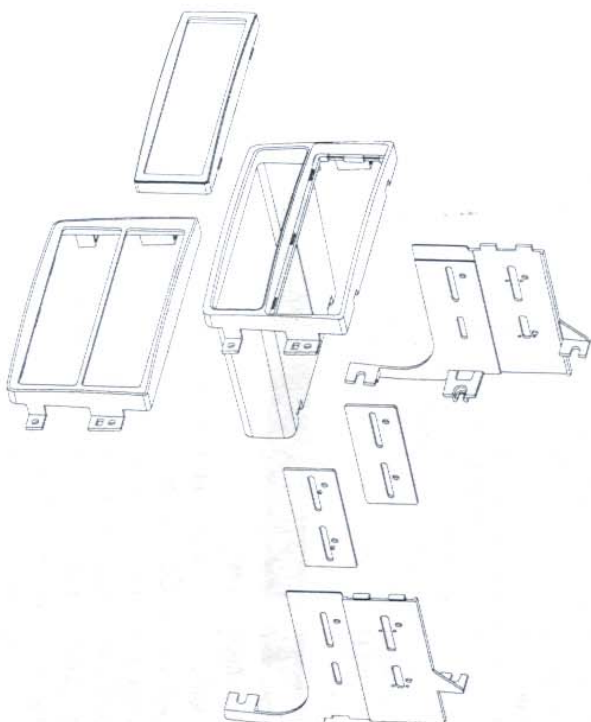

**VEHICLE APPLICATIONS**

**NISSAN**

2006 350 Z




# KIT ASSEMBLY INSTRUCTIONS

## Double DIN & Double ISO Mount Applications

1. Remove the shaded tab on both Left and Right Brackets as illustrated below.
2. For double DIN radio applications ONLY cut and remove center rib from \_\_\_\_\_ and file edges smooth.
3. Attach the \_\_\_\_\_ to the \_\_\_\_\_ and \_\_\_\_\_ mounting brackets.
4. Attach (1) ISO spacer to the inside upper part on both Left and Right mounting brackets as shown in Fig. A.
5. Insert ISO mountable radio between Left and Right brackets and attach radio to brackets using screws supplied with radio (when possible) or screws supplied with kit.
6. Mount radio and side brackets to factory radio bezel.
- Then place radio trim bezel back into position.
7. Attach a rear support bracket to the rear of the radio components and adjust as needed to allow rear support bracket to rest in the sub-dash (optional).
8. Mount radio with brackets to sub-dash.
9. Re-attach all harnesses to radio trim bezel and re-assemble dash, (this is a tight fit and may require some patience). You may also remove the forward section shown in Fig. D below from the Left and Right mounting brackets.

**NOTE: #1 - ISO trim ring** \_\_\_\_\_ must be used in place of after-market radio's trim rings. For ISO mount applications, mount after-market radio components to side brackets using screws provided with radio when possible or hardware included with kit.

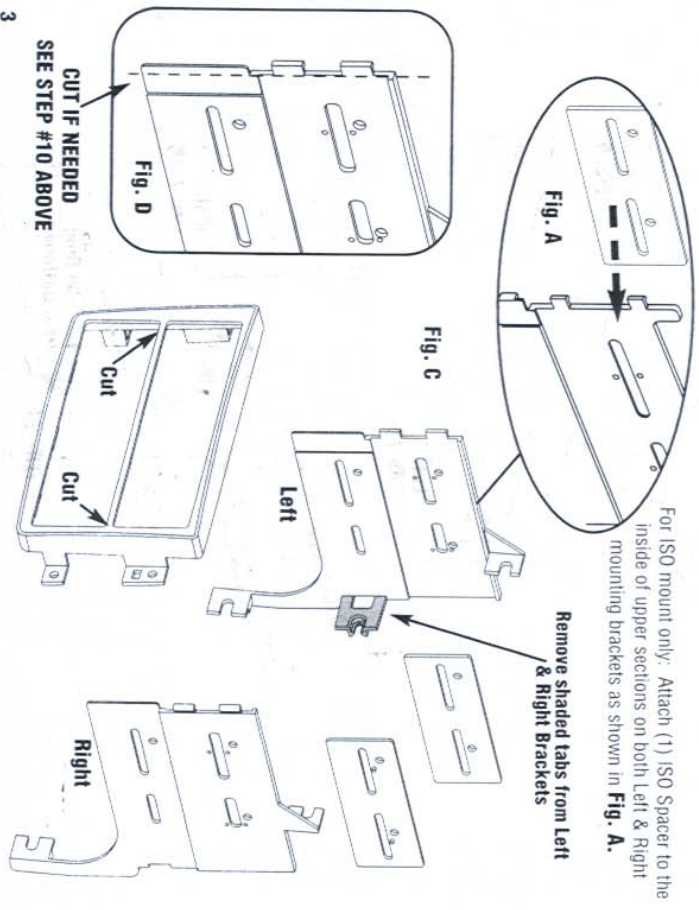

## NOTES:

---



---



---



---



---



---



---



---



---



---

**NOTES:**

---



---



---



---



---



---



---



---



---



---



---

**KIT ASSEMBLY INSTRUCTIONS**

**Single ISO Mount Applications**

1. Attach the left and right side brackets to the main bracket. See Figure B.
2. Insert pocket into lower section of the main frame.
3. Using screws supplied with kit, attach pocket to left and right side brackets.
4. Attach (1) ISO Spacer to the inside upper section on both Left & Right mounting brackets as shown in Fig. A. (See note #2 below)
5. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or hardware included with kit.
6. Slide radio component forward or backward for desired look and tighten screws.
7. Attach a rear support bracket to the rear of the new radio and adjust as necessary to attach to the rear support stud located on the back of the pocket using the small phillips screw supplied with kit.
8. Be sure all radio connections are correct and you have tested all features. Then install kit and radio assembly.

**NOTE:** #1 - ISO trim ring may be used in place of after-market radio's removable trim ring.  
 #2 - Spacers must read upright (This side up for single ISO install)

**For ISO mount only:** Attach (1) ISO Spacer to the inside of upper section (See note #2) on both Left & Right mounting brackets as shown in **Fig. A.**

