


Clarion

2-DIN

BKX-1260-02



Installation manual for: **Landrover Freelander II 2007 -->**

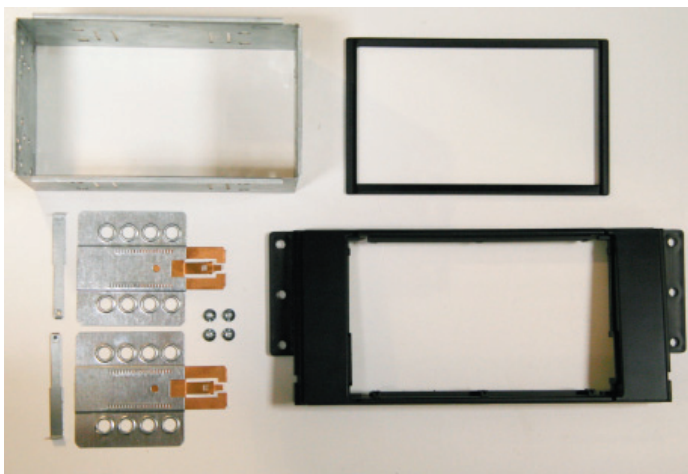

Installation kit includes the following items:



- * 1X 2-ISO 100 mm. metal bracket
- * 1X Replacement frame
- * 1X Radio trim
- * 2X Mounting plates
- * 2X Mounting spacers
- * 4X Screws
- * 2X Radio removal keys

EXAMPLE

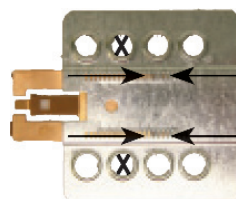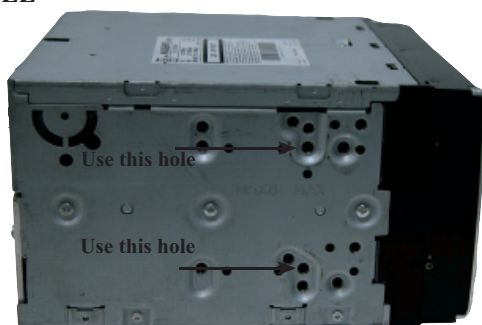

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 16 & 18 marked with an arrow.
Measured from left to right.

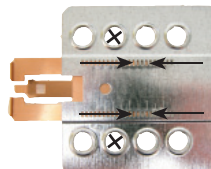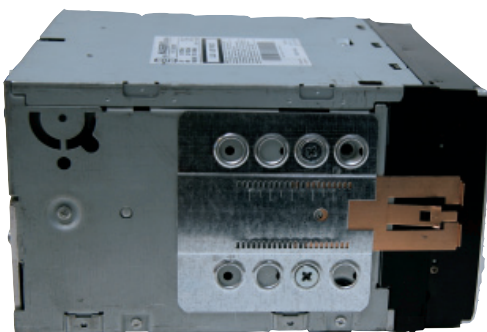

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 16 & 18 marked with an arrow.
Measured from left to right.

* Mount the plates.

Remark: The fixing position can be different between Audio and Multimedia unit!

Clarion

2-DIN

BKX-1260-02



Remove the dashboard panel at the location of the arrows.

2



Remove the rubber plaid.

3



Remove the four screws at the location of the arrows.

4



Remove the dashboard panel.

Remove the radio. This is tightened by four screws at the location of the arrows.

5



6



Place the replacement frame.

Connect all of the needed wiring harnesses and check the connections carefully.

Clarion 2-DIN BKX-1260-02

7



Place the 2-Din metal bracket.

8



Place the the dashboard panel.

9



Place the headunit and radio trim.