


# CCE 141

Car model : BMW 1 + BMW 3 (05 -->) WITH RADIO BUSINESS CD

Appliance kit : Clarion CAN bus interface and hardwire radio remote control

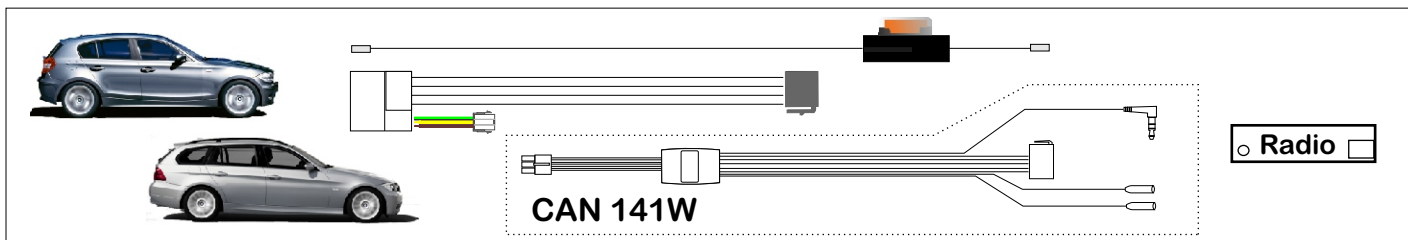





## Connect Cabel and Radio


- 1 - Disassemble / remove original radio "Business CD"
- 2 - Replace +30 constant power to the Car radio connector (see back of this page)
- 3 - Install facia plate
- 4 - Connect CCE 141 to original car connector
- 5 - Connect CAN 141 W adapter to radio and wire harness
- 6 - Test steering wheel buttons and radio functionality
- 7 - Slide Clarion into facia panel and fix firmly

## Function table






BUTTON	FUNCTION
+	VOLUME UP
-	VOLUME DOWN
	No function
	Next
	Previous
	CHANGE TUNER / CD

## Replace +30 lead

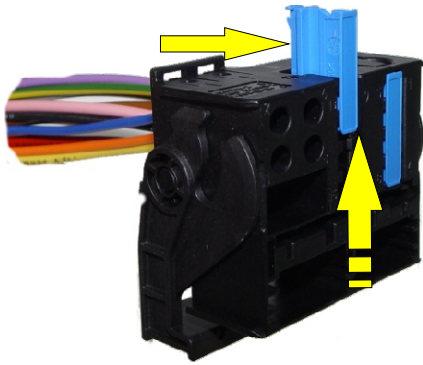

Car radio connector

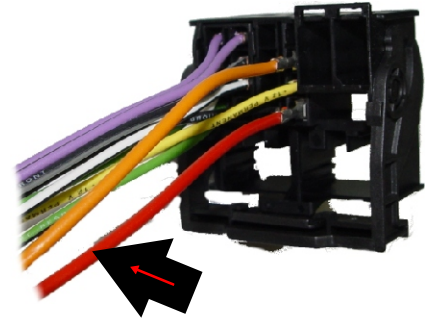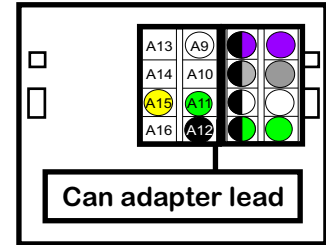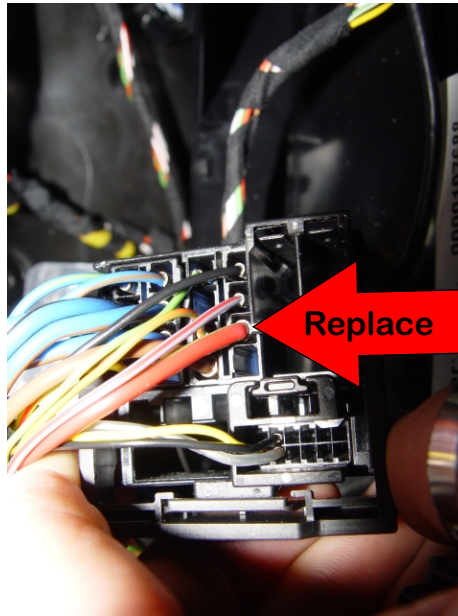


New +30 lead

## Connecting +30 constant power

- 1 - Remove the fuse box panel behind the glove compartment.
- 2 - Route the red "+30 constant power" cable towards the fuse box behind the glove compartment.
- 3 - Push the female terminal of the +30 constant power cable into the free socket at position **19** of the fuse box (see fuse box panel).
- 4 - Place the mini fuse of 10 amp at position 19.
- 5 - Resume the installation procedure on the front page.

## Fusebox BMW 1 / BMW 3

Position 19, place the mini fuse of 10A

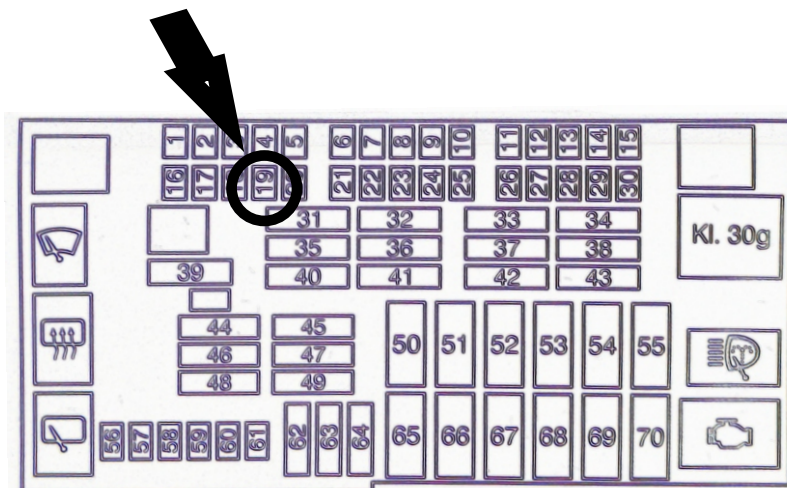

Fuse box panel of BMW 1 and BMW 3 , glovebox department