


Clarion

2-DIN

BKX-1320-00

Installation manual for:



**VW Golf 4/ Bora/ Lupo/ Polo 9N/ Passat --> 2005/ Sharan --> 2006/
Seat Cordoba/ Leon/ Skoda Fabia --> 2004/ Octavia --> 2004**

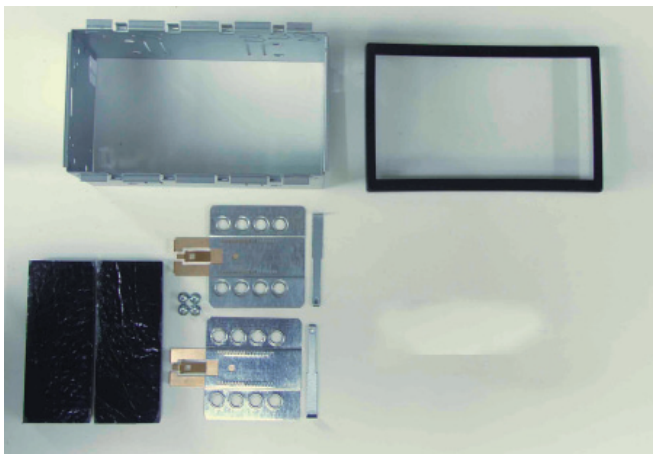

Installation kit includes the following items:



- * 1X 2-ISO 110 mm. metal bracket
- * 1X Radio trim
- * 2X Mounting plates
- * 2X Mounting spacers
- * 4X Screws
- * 2X Cushion

EXAMPLE

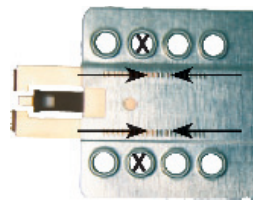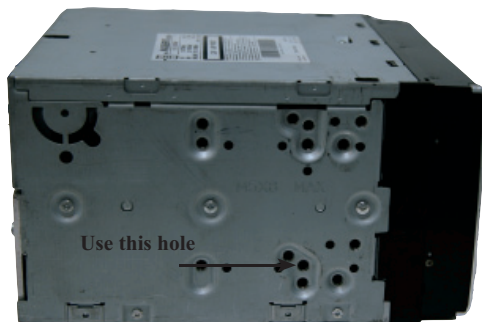

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 12 & 14 marked with an arrow.
Measured from left to right.

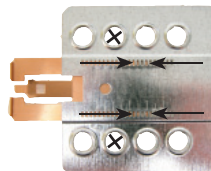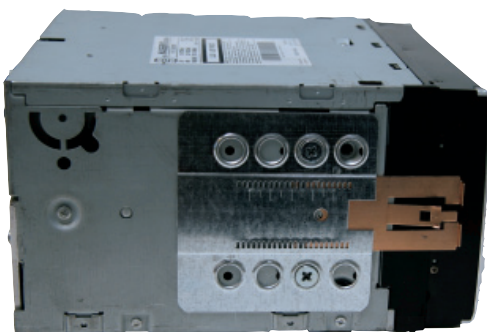

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

* Mount the plates.

Remark: The fixing position can be different between Audio and Multimedia unit!

Clarion

2-DIN

BKX-1320-00

1



Remove the storage bin/ original radio.

2



3



Place the 2-Din metal bracket.

4



Place the headunit and place the radiotrim.

Connect all of the needed wiring harnesses and check the connections carefully.